

## Application Note

This guide is for you to construct a network between wired and wireless network with the Access Point.

This sheet will guide you how to install **Access Point** mode and **Station/Bridge** mode on basic network step by step. If you encounter problems during the installation, please refer to your **User Manual**.

## Introduction

The Access Point can swap between these two modes: **Access Point** and **Station/Bridge**. In this application note, we will give two examples to show you how to construct a network with the two modes of the Access Point. Figure 1 is the example of connecting two networks wirelessly. Figure 2 is the application of using the Access Point as an access point repeater.

*Note: To have your Access Points switched between the **Access Point** mode and the **Station/Bridge** mode, please refer to the **AP Station Upgrade Quick Guide**.*

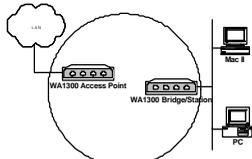


Figure 1: Connect two networks wirelessly

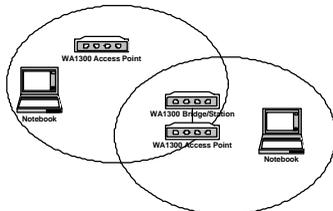


Figure 2: AP Repeater



Figure 3: Installation Diagram

## Application 1: Connect Two Networks Wirelessly

### System Requirements

- Two Access Point devices. One sets to **Access Point** mode and the other sets to **Station/Bridge** mode.
- One or more PCs (desktop or notebook) with Ethernet interface. Set its **IP address**, for example, to 192.168.1.200 and **Subnet mask** to 255.255.255.0.
- TCP/IP** protocol must be installed on all PCs.
- Network cables. Use standard 10/100BaseT network (UTP) cables with RJ45 connectors.
- Microsoft Internet Explorer 5.0 or later or Netscape Navigator 4.7 or later.

### Installation Instructions

- Use straight LAN cable to connect the **Access Point** with one LAN and **Station/Bridge** with the other. Figure 1 shows the placement.
- Connect the power adapter to the power jacks on both of **Access Point** and **Station/Bridge**.
- Open the Web browser to enter the **Access Point** Web management page, and then set the **Network Name** of **Access Point** to, for example, **wirelesslan**. Figure 4 shows the **Access Point** Web management configuration page.



- In the **Station** Web management page, set the **Network Name** of **Station/Bridge** to **wirelesslan**. Figure 5 shows the **Station** Web management configuration page.



Figure 5: Station Web management configuration page

Once you have configured all of the PCs on your network with appropriate values, the setup and installation of connection between two networks are complete.

## Application 2: AP Repeater

### System Requirements

- Three Access Point devices. Set two of them to **Access Point** mode and the other to **Bridge/Station** mode.
- One PC (desktop or notebook) with Ethernet interface. Set its **IP address** to, for example, 192.168.1.200 and **Subnet mask** to 255.255.255.0. (For setting all Access Point devices)
- TCP/IP protocol must be installed on PC.
- Network cables. Use **crossover** 10/100BaseT network (UTP) cables with RJ45 connectors.
- Microsoft Internet Explorer 5.0 or later or Netscape Navigator 4.7 or later.

### Installation Instructions

- Use crossover LAN cable to connect **PC** with one **Access Point**. Here we label it as **AP1** hereafter.
- Connect the power adapter to the power jack on **AP1**.
- Set the **Network Name** of **AP1** to, for example, **rep** on **AP1** Web management page. Figure 4 shows the **AP** Web management configuration page.
- Set the **IP address** of **AP1** to, for example, **192.168.1.80** on **AP1** Web management page. Figure 6 shows the **AP** management administration page.
- Use crossover LAN cable to connect **PC** (disconnect to **AP1**) with one **Bridge/Station**. Here we label it as **STA** hereafter.
- Connect the adapter to power jack on **STA**.
- Set the **Network Name** of **STA** to, for example, **wirelesslan** on **Station** Web management page. Figure 5 illustrates the **Station** Web management configuration page.
- Set the **IP address** of **STA** to, for example, **192.168.1.99** in the **Station** Web management page. Figure 7 illustrates the **Station** Web management administration page.



Figure 6: AP management administration page



Figure 7: Station management administration page

- Use crossover LAN cable to connect **PC** (disconnect to **STA**) with the other **Access Point**. Here we label it as **AP2** hereafter.
- Connect the power adapter to the power jack on **AP2**.
- Set the **Network Name** of **AP2** to, for example,, **wirelesslan** on **AP2** Web management page. Figure 4 shows the **Access Point** Web management configuration page.
- Set the **IP address** of **AP2** to, for example, **192.168.1.90** on **AP2** Web management page. Figure 6 shows the **AP** management administration page.
- Use crossover LAN cable to connect **AP1** (disconnect to **AP2**) with **STA**.

Once you have configured all the Wireless PCs on the two networks with appropriate value of **Network name**, the **AP Repeater** setup and installation are complete.