



## Quick Guide for EZLoop VoIP Wireless Phone 3<sup>rd</sup> Generation

1	 A screenshot of the WindowsCE operating system interface. The title bar reads 'WindowsCE'. Below it is a menu bar with 'File', 'Zoom', 'Tools', and 'Help'. The main screen displays 'SIP Settings' at the top. Below this are several icons: a clock, a call log, a phone book, network settings, wireless, phone settings, SIP settings (highlighted with a yellow border), web cam, MSN, and Skype. At the bottom, there are 'Select' and 'Return' buttons.	<p>Before you begin, please kindly be noted the device is under user mode, not admin mode for default setting. Now, please select “SIP Settings” first.</p>
2	 A screenshot of the WindowsCE operating system interface. The title bar reads 'WindowsCE'. Below it is a menu bar with 'File', 'Zoom', 'Tools', and 'Help'. The main screen displays 'SIP Settings' at the top. Below this is a 'Display Name' field with a blue background and a white text box. At the bottom, there are 'Edit' and 'Return' buttons.	<p>You'll see “Display Name” only. (Note.Still under user mode for now.)</p>
3	 A screenshot of the WindowsCE operating system interface. The title bar reads 'WindowsCE'. Below it is a menu bar with 'File', 'Zoom', 'Tools', and 'Help'. The main screen displays 'Phone Settings' at the top. Below this are several icons: a clock, a call log, a phone book, network settings, wireless, phone settings (highlighted with a yellow border), SIP settings, web cam, MSN, and Skype. At the bottom, there are 'Select' and 'Return' buttons.	<p>Return to Standby Screen. Then, select “Phone Settings”.</p>



4		Select "Phone Password".
5		You'll see the default setting of "Password Settings" is No.
6		Edit "Enable" from No to Yes.


 


7		Select "User Password".
8		Edit "User Password". Key in the password you preferred, please remember the password. After that, select "Exit".
9		Return to Standby Screen.




10		Power down the device first. Then turn it back on. You'll see the window for "Phone Password" request.
11		Press the Call button(Green color one) for 3 seconds. And you'll see "Phone Password (Admin)" displays.
12		Enter the factory default admin password "0000". <b>**TIP : Press the star key( * ) twice to access numeric key presses. Press the OK softkey.**</b>

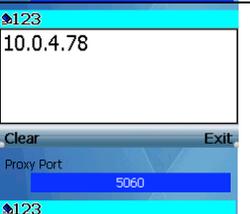


13		<p>Now you're under admin mode. It means that you can change the SIP Settings Items. Select "SIP Settings".</p>
14		<p>A list of SIP settings will be displayed. For the Proxy IP setting, select "Edit".</p>
15		<p>Enter the Proxy IP address in the new window, and the press the center selection key.</p>
16		<p>Scroll down to Proxy Port, and select "Edit". Enter the Proxy Port number address in the new window, and then press the center selection key.</p>
17		<p>Scroll down to Register Proxy IP, and select "Edit". Enter the Register Prroxy IP address in the new window, and then press the center selection key.</p>
		

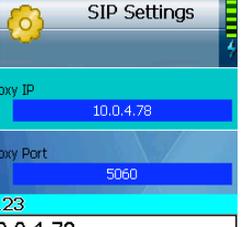

18		<p>Scroll down to Register Proxy Port, and select “Edit”. Enter the Proxy Port number address in the new window, and then press the center selection key.</p>
19		<p>Scroll down to Outbound Proxy IP, and select “Edit”. Enter the Outbound Proxy IP address in the new window, and then press the center selection key.</p>
20		<p>Scroll down to Outbound Proxy Port, and select “Edit”. Enter the Outbound Proxy Port number address in the new window, and then press the center selection key.</p>
21		<p>If your Internet phone service provider did not provide an Expire Time setting, then keep the default setting “3600 seconds”. If your Internet phone service provider provided an Expire Time setting, then scroll down to Expire Time, and select “Edit”. Enter the Expire Time in the new window, and then press the center selection key.</p>
22		<p>Scroll down to Phone Number, and select “Edit”. Enter the Phone Number you’ll use for Internet phone calls, and then press the center selection key.</p>
		

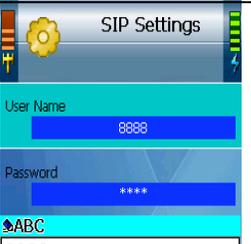

23		Scroll down to User Name, and select “Edit”. Enter the User Name in the new window, and then press the center selection key.
24		Scroll down to Password, and select “Edit”. Enter the Password, and then press the center selection key.
25		On the SIP Settings screen, select “Return”.
26		On the main menu, select “Return”. <b>**Note. You can go back the above step 3 to disable the phone password settings if you don't like to key in the password for turn on the device every time. The procedure as below listed. Phone Settings→Password Setting→Enable from “Yes” to “No” **</b>